 


XK3118T16

仪表

使用说明书

2017年9月版



宁波柯力传感科技股份有限公司

地 址： 宁波市江北投资创业园 区长兴路 号

服务热线： 400-887-4165

800-857-4165

传 真： 0574-87562271

邮 编： 315033

网 址： _____

XK3118T16
A/D

RS232

◆ A/D
◆
◆
◆
◆
◆
◆
◆
◆
◆

1.5uV/e
DC 5V 1 6 350Ω
-16mV 18mV
4
1/2/5/10/20/50

10

/RS232 600bps

RS232
1200/2400/4800/9600

 
◆
◆
◆
◆
◆
◆
◆




 
 

 
 
AC 110 220V 50Hz 60Hz
6V/4Ah 10 85 RH
0°C~40°C 10 95 RH
0°C~40°C

2.1

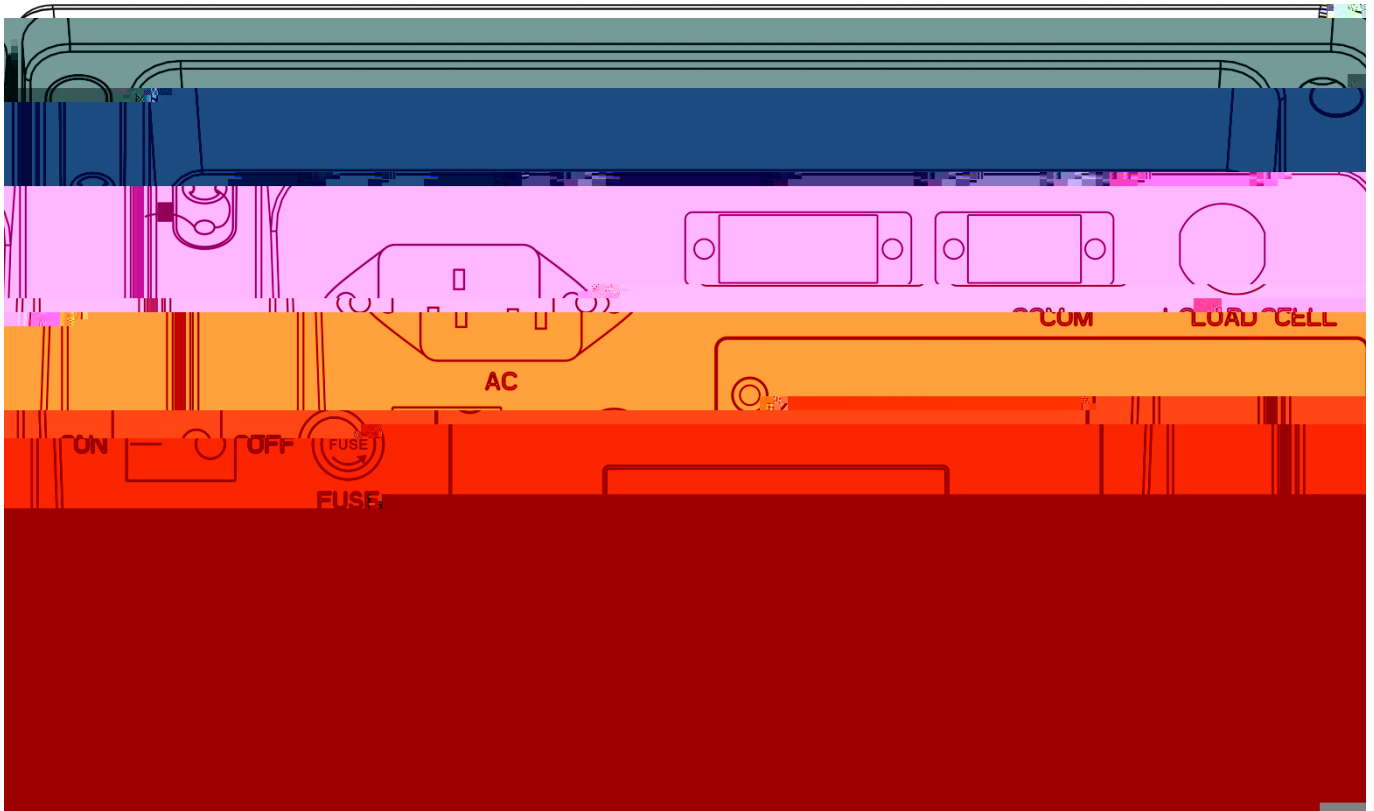

XK3118T16



□ □



“↙”

3.2

3.3

 
3.4

3.5

↙

↙

↙

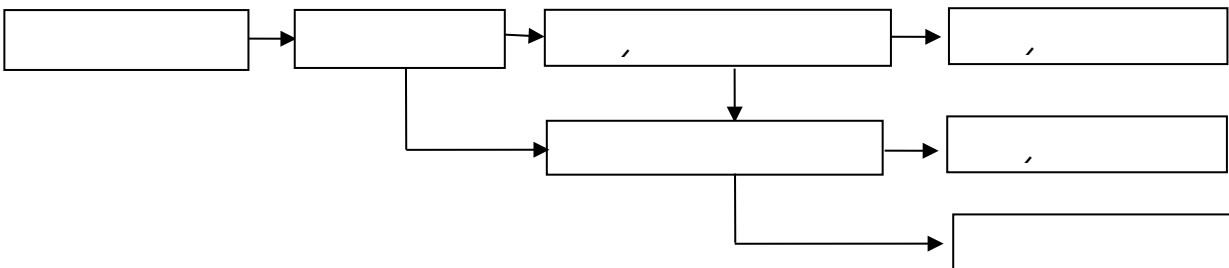

kg lb

3.6

--	--	--	--



	✓		
	✓		
	✓		
	✓		
			✓
			✓

“C”

3