



D12

2017 9

•

•



2012F152-33

00000577



1 D12 D12-P() D12-P1()

2 GB/T 7724.2-2008



3

4

RS485

12

30

9600 19200bps

DC12~14.8V

16

5

7 LED 7

6

0 ~ 9

24 10

7

8

RS232

600bps

9

RS232

600/1200/2400/4800/9600/19200

10

ESPON LQ-300K ESPON
LQ-300K ESPON LQ-680K ESPON LQ-730K ESPON LQ-
1600K KX-P1131 KX-P1121 DS-300

11

1500 201 2000 2
0

12

AC110~220V 50~60HZ

DC 12V

-10°C ~ 40°C

-25°C ~ 55°C

85%RH


IP43

320 ×210 ×180

16

1.6


一、仪表与数字传感器的连接

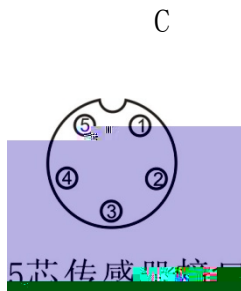

		C	E
1	+		
2	-		
3	A +		
4	B -		

二、仪表与大屏幕的连接使用

1. RS232

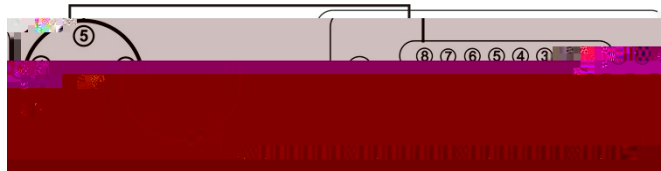


2.



三、仪表与电脑的连接使用

RS232 RS485(D2008-FG/P/P1)

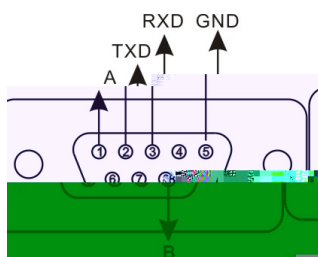

PC

PC	9
2	2
3	3
5	5

RS232

PC	RS485
1(A)	A
9(B)	B

RS485

1			
2		o ***** o 35790	35790
3		P ***** P 01000	1000()
4			

2.

3.

三. 称重记录的打印

1

2

1 2

3

4

5

2

LoAd 1.5

①

②

0

③

2

5

四. 统计报表的打印


1

, 70 8* 9*

2

a)

Pb 00

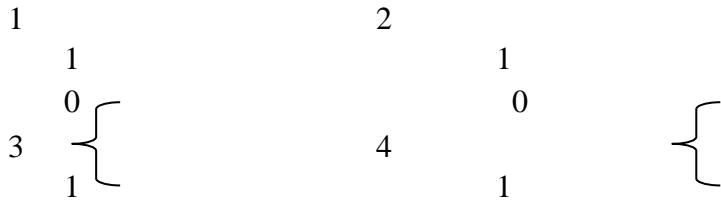

b

1	40	Pb 00 Pb 40	“40”
2	40101	d**.**.** d04.01.01	04.01.01
3	40201	A**.**.** A04.02.01	04.02.01
4		Prnt	

c

1	80	Pb 00 Pb 80	80 81 82 90 91 92 93 99 80
		Prnt	

五. 称重记录的查询

1

000000 , **rEAd 1** **c**

rEAd 1		rEAd 2	
rEAd 3		rEAd 6	

/ /

2

1	888888	C000000 C-.....	“ ” 2

2	1	rEAd 1	"1"
3	090302	d**.*.*.* d09.03.02	09 03 02 2009 03 02
4		No 0001 t**.*.*.* o ***** HN *** A ***** t ***** N *****	}
5		No 0002 t**.*.*.* o ***** Hn *** A ***** t ***** N *****	}
6		No 0003	
7		No 0002	
8	No 0002 t**.*.*.*	
.....
9		bN ** ENd 1~2	n
10			

1	888888	C000000 C-----	" "
2	6	rEAd 1 rEAd 6	6
3		No 001 o *****	P***** 00485 /
4		P*****	
5		No 002 o *****	
.....
6		No *** o *****	
7		P*****	
8		ENd	

1~2

八. 查询打印

-
- 1.
- 2. Prnt
- 3. LoAd

- 4. SAUE 0
- 5. EnD
- 6. PASS

-
- 1. Err 03
- 2. Err 08
- 3. Err 09
- 4. Err 10

20

- 5. Err 11
- 6. Err 12
- 7. Err 13 /
- 8. Err 14 20
- 9. Err 16
- 10. Err 17

11. Err 18

12. Err 19

- 13. Err 26
- 14. Err 28

- 15. Err 30
- 16. Err 31 ,
- 17. Ecc 01~16 n
- 18. Ecc 71~86 n-70 C
- 19. Err adr 1

• Err P

Err 23 :
Err 91 :

•
ctnu 0

25

0 1 2

0
1
2
Err 26

Lo bAt

10.5V

10.2V

A

1			P000.000	
2		1000	P001.000	
3			- 1.000	/
4		1 2	o *****	/
5		00123	o 00123	6
6			HN ***	
7		001	HN 001	8
8			PrNt	

1		1	o *****	
2		00123	o 00123	“00000” “0”
3			HN ***	2
4		011	HN 011	
5			PrNt	

0

1		1	o *****	
2		00123	o 00123	“00123”

3			HN ***	
4		011	HN 011	
5			PrNt	

1		2	o *****	
2		00123	o 00123	
3			HN ***	
4		011	HN 011	
5			LoAd	1.5
6		2	o *****	” “ 2
7			HN ***	” “ 4
8			PrNt	

1			PSt 00	
2		2	PSt 02	
3			P2 00	
4			AUto 0	
5		1	AUto 1	
6			tyPE *	0
7			*****	
8			P000.000	
9		1000	P001.000	
10			*****	/
11			*****	/
12			PrNt	

1			o *****	
2		00123	o 00123	

3			*****
4		1 2	o *****
5			HN ***
6		011	HN 011
7			PrNt

B

()

				(t)	(t)	(t)
0001	05 20 06	00001	003	2.003	1.000	1.003
0002	05 20 21	00123	004	1.000	1.000	0.000
0003	05 20 41	00001	010	1.000	0.100	0.900
0004	05 20 44	00001	001	1.000	0.100	0.900
0005	05 20 45	00001	050	1.000	0.100	0.900
0006	05 20 45	00002	06	1.000	0.100	0.900
7.003 t				4.603		

1

			(t)	(t)
0001	00001	1.000	5.003	3.703
0002	00123	1.000	1.000	0.000
0003	00002	0.100	1.000	0.900

1

			(t)	(t)
0001	001	0001	1.000	0.000
0002	002	0002	2.000	1.800
0003	003	0002	2.000	1.800
0004	056	0001	2.003	1.003

适用型号：D12、D12-P(面板热敏微打)、D12-P1(面板针式微打)

D20-1



地址：宁波市江北投资创业园C区 长兴路199号

服务热线：400-887-4165

传真：0574-87562271

邮编：315033

网址：<http://www.kelichina.com>