
XK3118T16 (WL)

仪表

使用说明书

2016年08月版

!

!

"
"
"
"
"
"
"
"
"

()

2

20

,

()

1.0 概述

XK3118T16(WL)

$\Delta-\Sigma$

A/D

RS232

RS232

◆ A/D

) *

20bitAD

10

◆

+1.5uV/e

◆

DC 5V,

1

6

350 Ω

◆ 信号输入范围

-16mV~18mV;

◆

4

◆

1/2/5/10/20/50

◆

6 LED 12

3

◆

/RS232

1
600bps

◆

RS232

1200/2400/4800/9600

◆

AC 220V 50Hz/60Hz

◆

6V/4Ah

◆

0°C~40°C

10

85

RH

◆

10°C~40°C

10

95

RH

◆

1.5kg


◆

◆ 仪表尺寸（长*宽*高）：






约236*150*150mm。

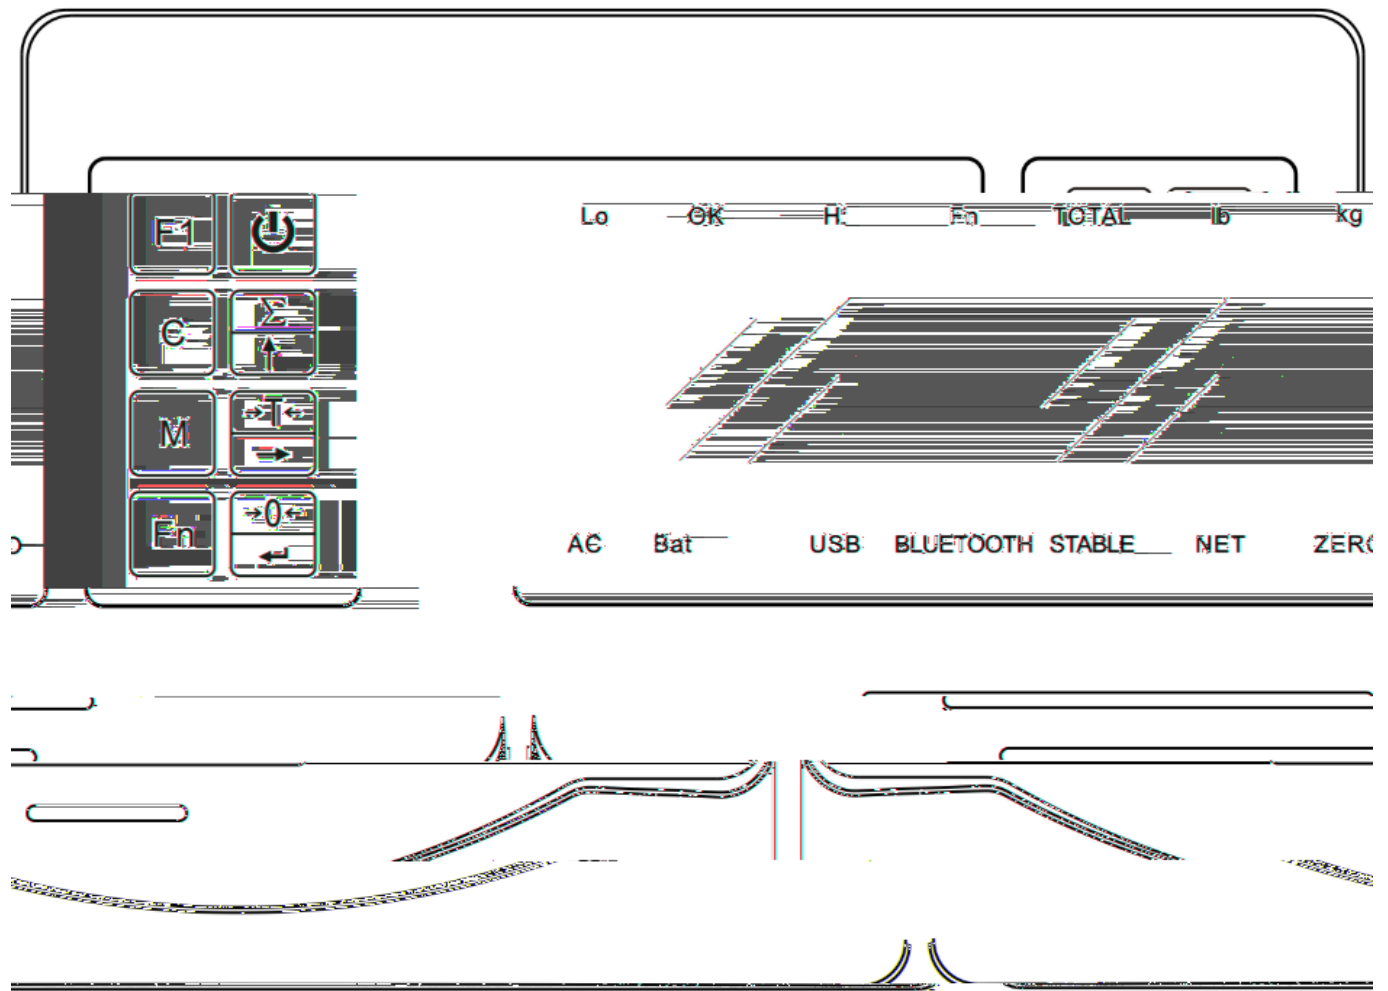2.0 安装

XK3118T16(WL)



XK3118T16(WL)

		3.5	5	3.	
	M				
		3.4			
		,	3.6	6	3.
		3.3			



“✓”

3.2

“ ”

2

3.3

“ ” “ ”

3.4

“ ” “0”

“ ” “ ”

“0” “ ” “ ” “ ” “ ”

3.5

1 5 “ ” “ ”


1 n

*** 1 “ ” “ ” “ ” “ ”

2 “ ” “✓”

3 “ ” “✓” C I D CLRAr-

, “ ” “C”

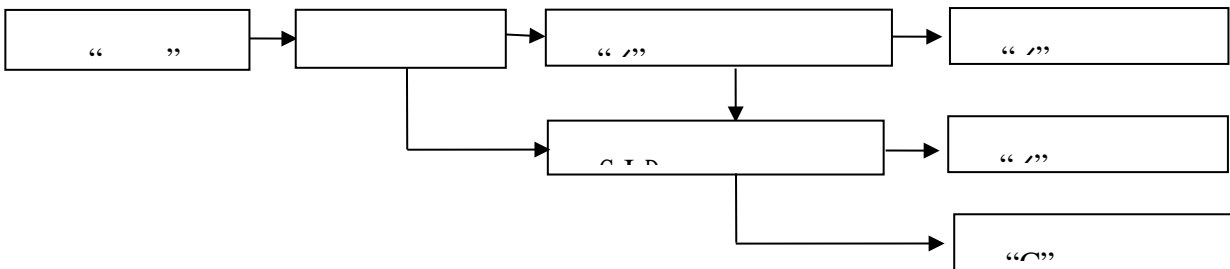

kg lb

3.6

“ ”

			“ ” (Funtion)
1	“ ” CJD “✓”	Fn **	Lb Fn ANL M ---
2	“ ” CJD “✓”	PS **	(Power Save) oFF oN 3 onP 2

3	CJD “✓”	br****	(Baud rate) 1200 9600bps
4	CJD “✓”	Co *	(Communicate Mode) 1 7
5		H*****	(High) : C I D “✓” CJD 2000
6		L*****	(Low) : C I D “✓” CJD 1000 “HI” “LO” “OK” 1 2
7		dIS***	CJD “0 7”
8		Stb***	15d 1d 3d 6d 9d 12d

“C”

3

“FN”

()

(

)

“LO”

“OK”

“HI”

1	8	23.45kg ASCII =54.3200 -23.45kg ASCII =54.320-
2	8	1
3	14	=0023.45 kg 23.45kg ASCII 0D 0A

4	14	3
5	5 10.00kg 'A': 'B': 'C': 'D': 'E':	ASCII 'A'~'E' 23.45kg 13.45kg :GW:0023.45(kg) :NW:0013.45(kg) :TW:0010.00(kg) :'D' :'E' 02, 03 RS232
6		
7	*	RS232 7 Co

3.7

30 6V/4Ah “ ” 1/3
2 24

3.8

5.5~5.8V 1 6.1V 3 5.5V 5.8~6.1V 2

4.0 错误信息提示

Err 01	
Err 02	
Err 03	
Err 04	
Err 05	AD
Err 06	
Err 09	
Err 10	

1		XK3118T16(WL)	1	
2		XK3118T16(WL) ()	1	
3		XK3118T16(WL) ()	1	
4		XK3118T16(WL)	1	
5		5 16M	1	
6		XK3118T16(WL)	1	
7	1	M4×8	4	
8	2	M6×25	1	
9		M6	1	
10		0.5A, Φ 5mm×20mm	1	
11		3*0.75/1.5m	1	